SlideRider

OWNER'S MANUAL — Please read before using this equipment.

Exciting, hip scooter action from the coolest rider in town!

Your RadioShack remote control SlideRider provides a great deal of fun and exciting scooter action, reaching a speed up to 180 feet per minute. It is built to handle the road in style, whether the road is the hallway or the sidewalk. The SlideRider comes with a removeable rider. You can use its transmitter to make it perform exciting stunts.

FCC DECLARATION OF CONFORMITY

This device complies with Part 15 of the *FCC Rules*. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Product:	Slide Rider
Model:	60-4281
Responsible Party:	RadioShack 100 Throckmorton Fort Worth, TX 76102
Phone:	817-415-3200

THE FCC WANTS YOU TO KNOW

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the *FCC Rules*. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult your local RadioShack store or an experienced radio/TV technician for help.
- If you cannot eliminate the interference, the FCC requires that you stop using your Slide Rider.

© 2001 RadioShack Corporation. All Rights Reserved.
RadioShack and RadioShack.com are trademarks
used by RadioShack Corporation.

RadioShack®

www.radioshack.com℠

Changes or modifications not expressly approved by RadioShack may cause interference and void the user's authority to operate the equipment.

INSTALLING BATTERIES

Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.

When the SlideRider or transmitter stops operating properly, replace the batteries.

Warning: Dispose of old batteries promptly and properly. Do not burn or bury them.

Caution: If you do not plan to use the SlideRider for several days, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

In the Transmitter

The transmitter requires one 9-volt battery (not supplied). For the best performance and longest operation, we recommend a RadioShack alkaline battery.

1. Press down on the battery compartment's cover and slide it in the direction of the arrow to remove it.
2. Put the battery in the compartment as indicated by the polarity symbols (+ and –) marked inside.
3. Replace the cover.

When the transmitter's range decreases, replace its battery.

Note: If you have difficulty removing the 9-volt battery from the transmitter, use a screwdriver to pry it from the battery compartment.

In the Rider and Scooter

You need six AA batteries (not supplied) to power both the rider and the scooter. For the best performance and longest operation, we recommend RadioShack alkaline batteries.

1. Slide **OFF/ON** to **OFF**.
2. Use a Phillips screwdriver to loosen the screw from the battery compartment on the rider's back.
3. Remove the cover.
4. Install three batteries in the compartment as indicated by the polarity symbols (+ and –) marked inside.
5. Replace the cover and secure it with the screw.
6. Repeat Steps 2 to 5 to install three batteries in the battery compartment on the bottom of the scooter.

PLACING THE SLIDERIDER

1. Align the rider's feet with the slots on the scooter.
2. Fit the pegs on the rider's right foot into the corresponding slots and slide the rider's foot forward until it clicks.
3. Fit the pegs on the rider's left foot into the corresponding slots and push the rider's foot backward until you hear it clicks.
4. Slide both of the rider's hands onto the handlebars.

PLAYING WITH THE SLIDERIDER

Warning: Never play with your SlideRider in the street.

Note: Make sure the SlideRider is secured on the scooter before playing.

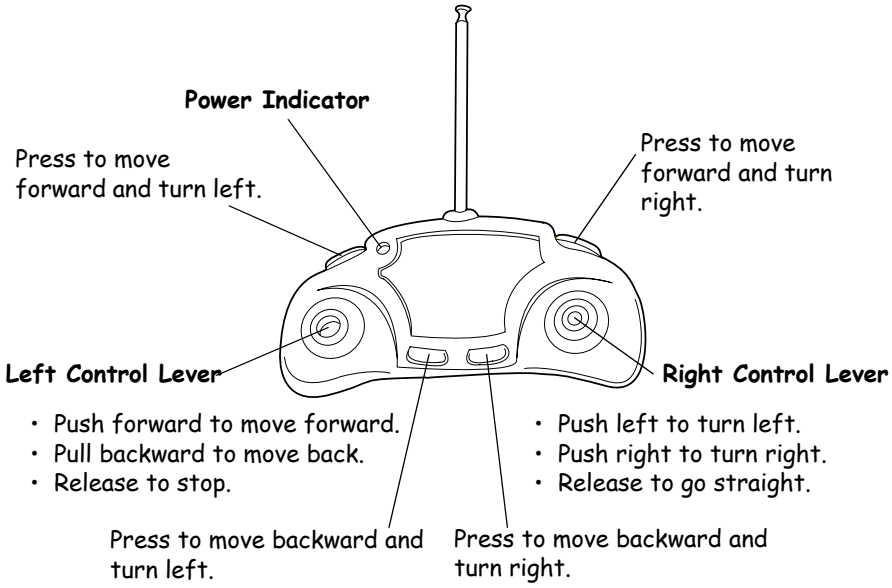

1. Insert the supplied antenna into the slot of the transmitter and turn it clockwise to secure it in place.
2. Slide **OFF/ON** on the bottom of the scooter to **ON**.
3. Use the transmitter's control levers and buttons to move the SlideRider. The power indicator lights each time you press or push the button and lever.

To make the SlideRider move forward and pop a wheelie, pull the left control lever backward, then quickly push it forward. To make the SlideRider spin in a wheelie, pull the left control lever backward when in a wheelie position.

Notes:

- The back light turns on each time your SlideRider moves forward and stops.
- Your SlideRider automatically enters sleep mode if you don't press any button or push a lever for about 5 minutes. To turn it on again, silde **ON/OFF** to **OFF**, then **ON** again.

HELPFUL HINTS

If the SlideRider's motor runs but it does not respond to the transmitter, move closer to the SlideRider and try again.

If someone uses another remote controlled device or a CB nearby, it might interfere with control of the SlideRider. If this happens, check to see if the transmitter uses the same frequency (27 or 49 MHz) and move the Slide Rider away from the device or the CB.

If the SlideRider moves slowly, and you have installed fresh batteries, check the wheel mechanisms and remove any lint, thread, hair, or dust you find.

CARE

Keep the SlideRider dry; if it gets wet, wipe it dry immediately. Use and store the SlideRider only in normal temperature environments. Handle the SlideRider carefully; do not drop it. Keep the SlideRider away from dust and dirt, and wipe it with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the SlideRider's internal components can cause a malfunction and might invalidate its warranty. If your SlideRider is not performing as it should, take it to your local RadioShack store for assistance.

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, crash, collision, impact, violent contact, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell *12/99*

RadioShack Corporation
Fort Worth, Texas 76102

60-4281
06A01
Printed in Hong Kong